


AEROKLAS - DUST SEAL

102110000885 INSTALLATION MANUAL AEROKLAS DUST SEAL FOR FORD RANGER 2022,DC,SPC,LC

Fit Time: 60 mins

BETTER PREVENTION

1. Part for the Tailgate for beter protection against dust and water.
2. Suitable for use with vehicles equipped with roof covers.
3. Easy to install without drilling holes.
4. Passed the standard waterproof and dustproof test.

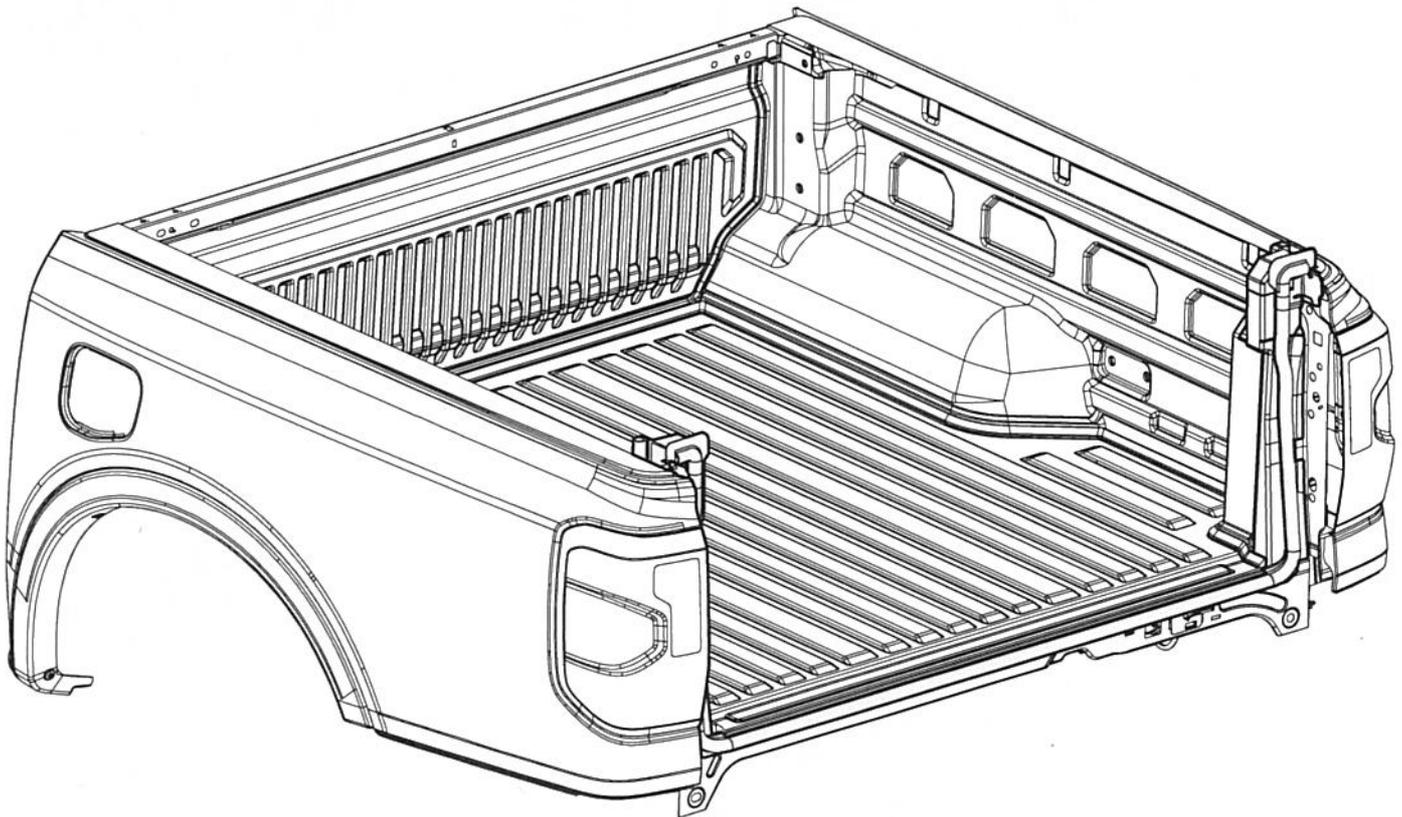


Aeroklas Factory (Rayong)
111/1, 111/10 Moo 2,
Tambol Makhanku,
Amphur Nikompatana,
Rayong 21180 Thailand.
Tel: +66-3889-3599-610

Aeroklas Office (Bangna)
62 Soi Bangna-Trad 25,
Bangna-Trad Rd., Bangna,
Bangkok 10260 Thailand.
Tel: +66-2744-3020

AEROKLAS.COM
ITEM NO. 102110000885

Parts List

PARTS LIST

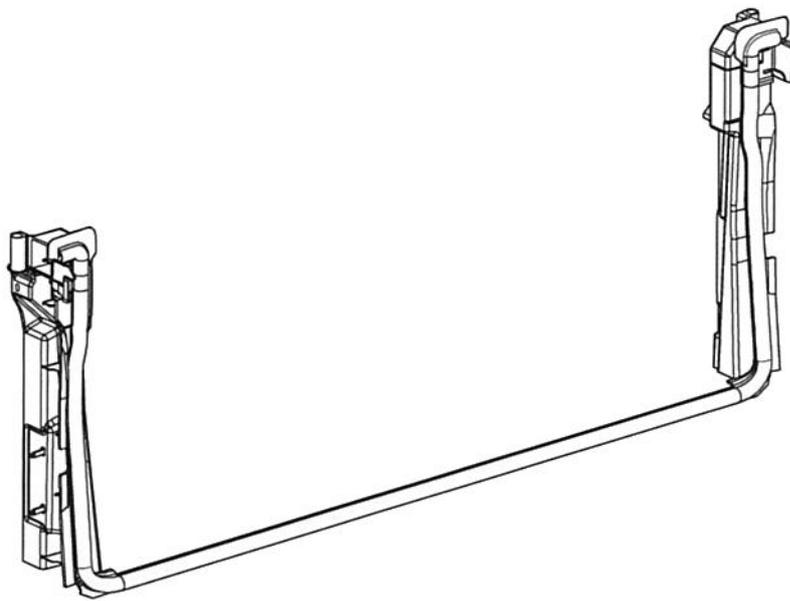

ISOMETRIC VIEW


INSTALLATION TOOLS



SCREWDRIVER



CUTTING TOOL



SAND PAPER



TAPE MEASURE






ELECTRIC DRILL




DRILL Ø5 mm.


Parts List

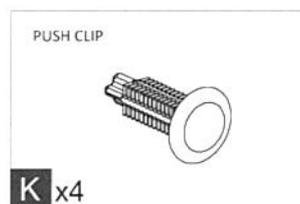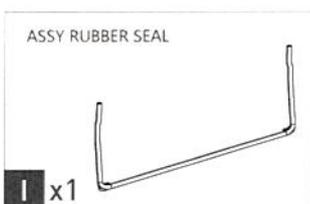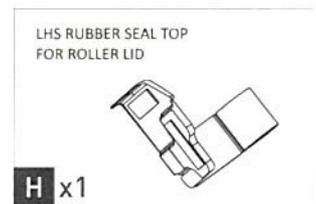

PRODUCT

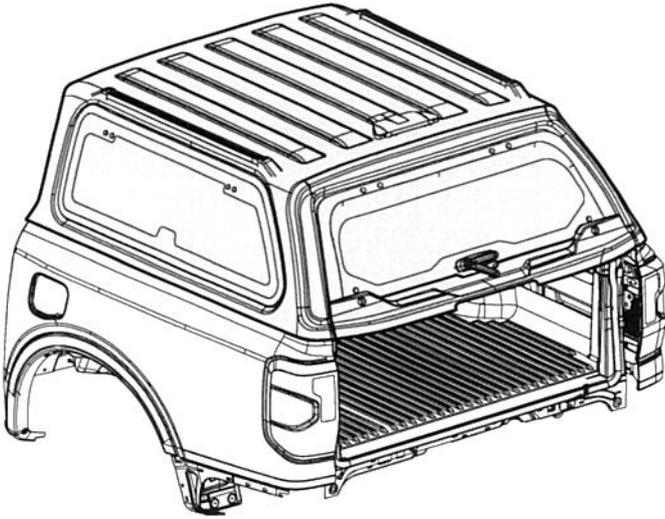


CANOPY ACA STYLISH FORD P703

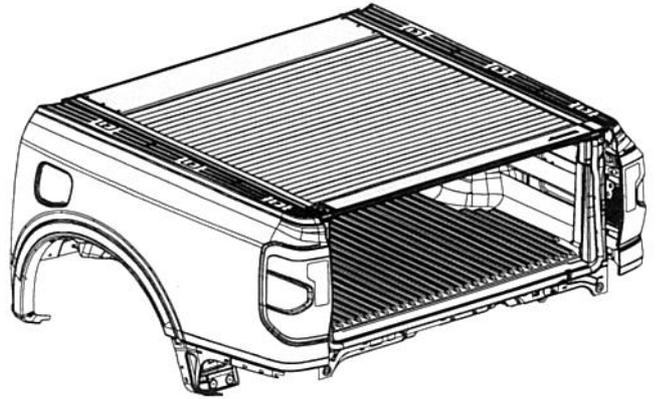


ROLLER LID FORD P703


TRUCK BOX WITH LINER

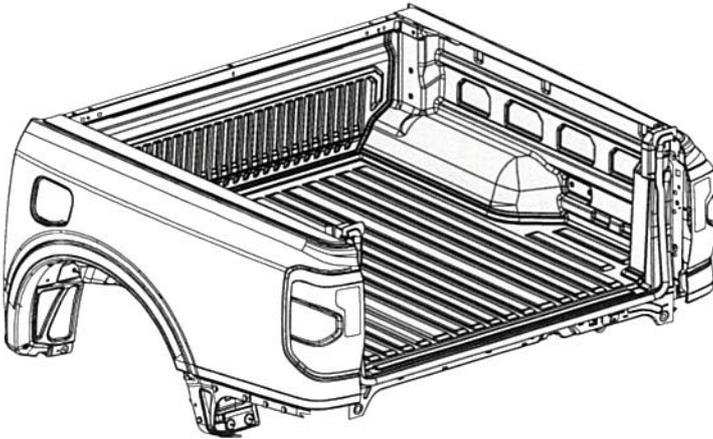

LINER FORD P703 OEM SHEET 5 Pcs.

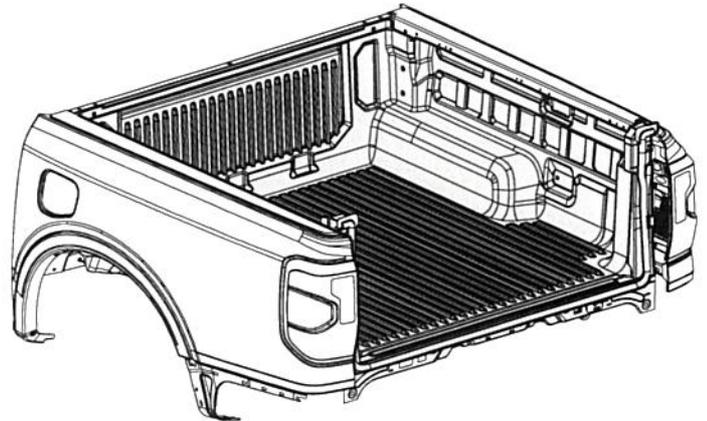




LINER FORD P703 OEM

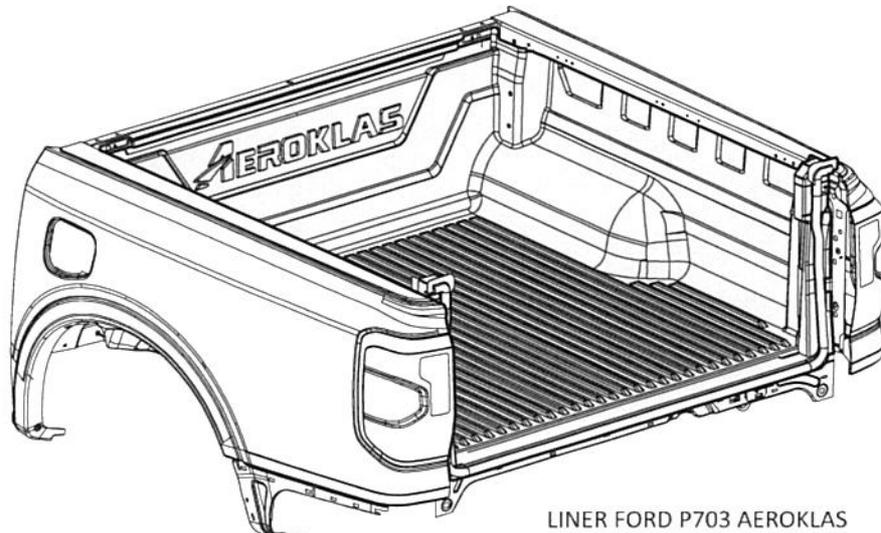

LINER FORD P703 AEROKLAS




DIMENSIONS FOR CUTTING LINER

LINER OEM FORD P703 SHEET 5 Pcs.

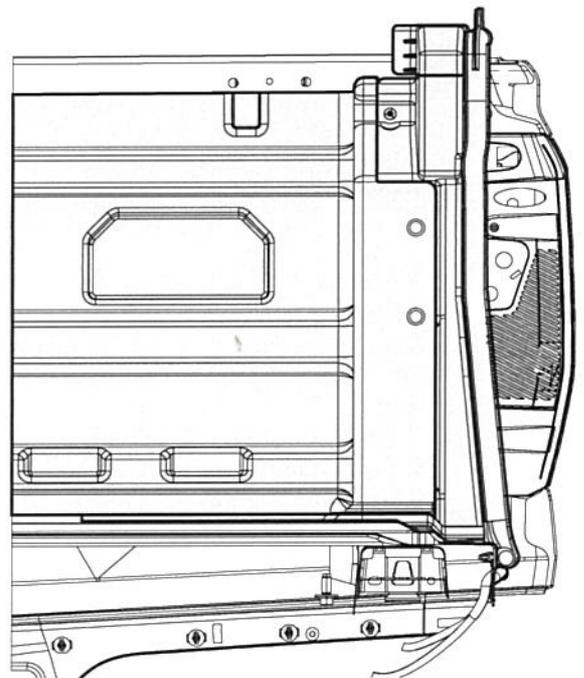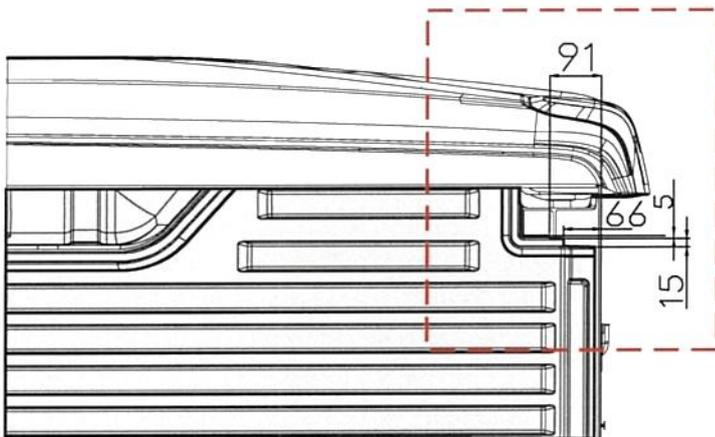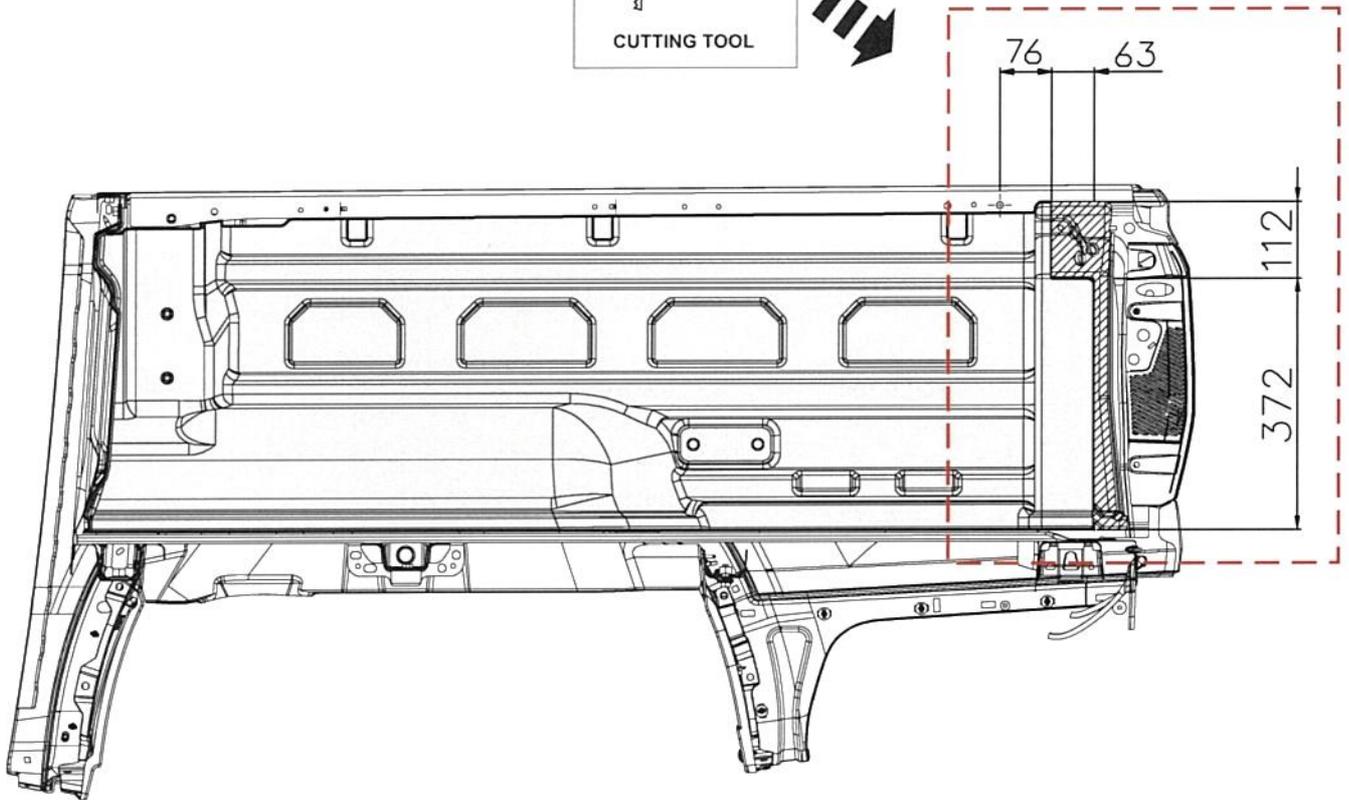




DIMENSIONS FOR CUTTING LINER

LINER OEM FORD P703

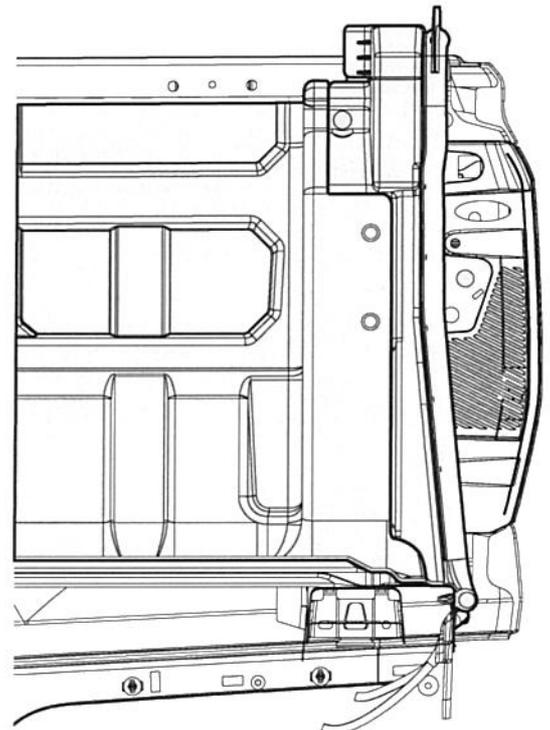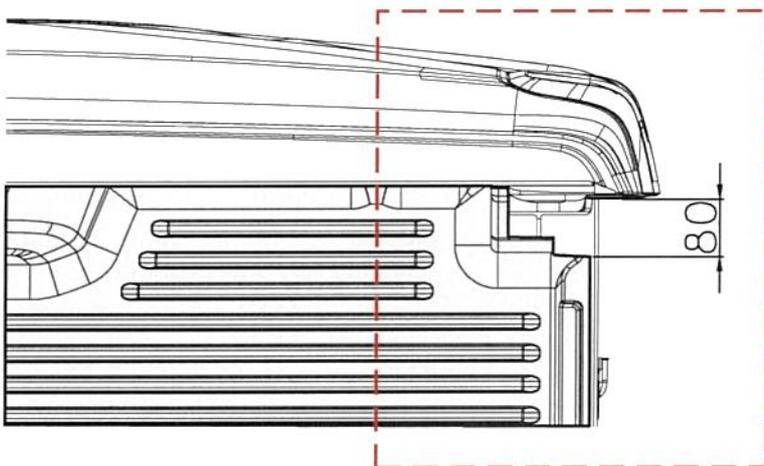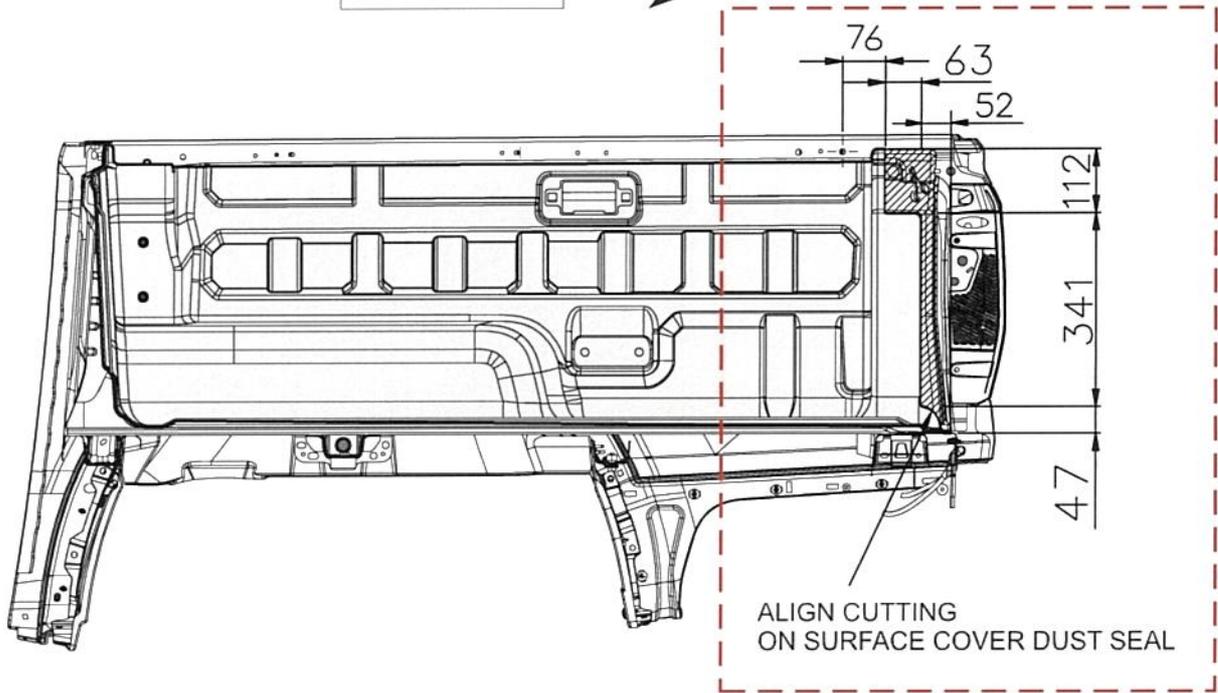

DIMENSIONS FOR CUTTING LINER

AEROKLAS LINER FORD P703

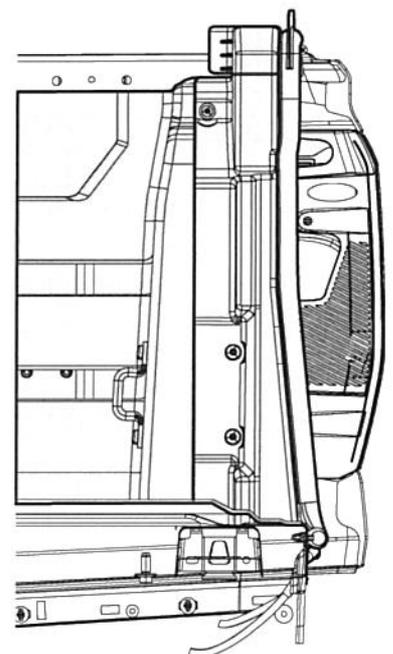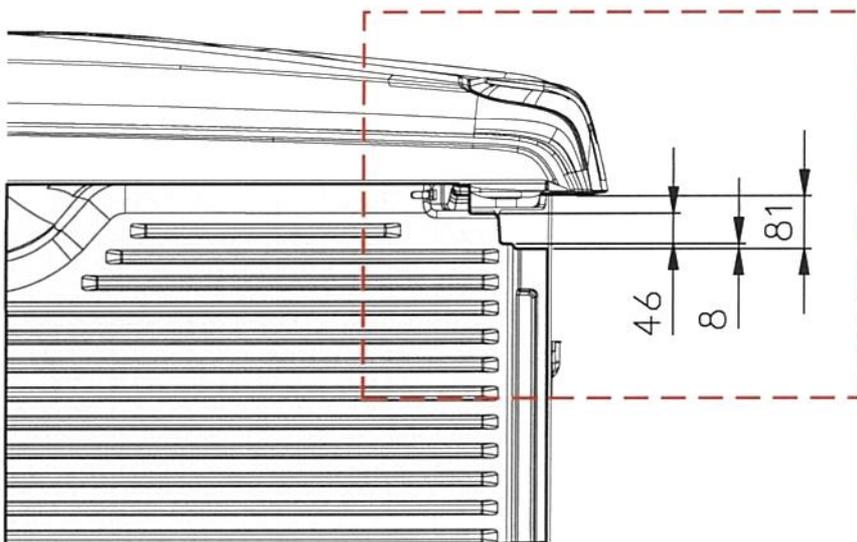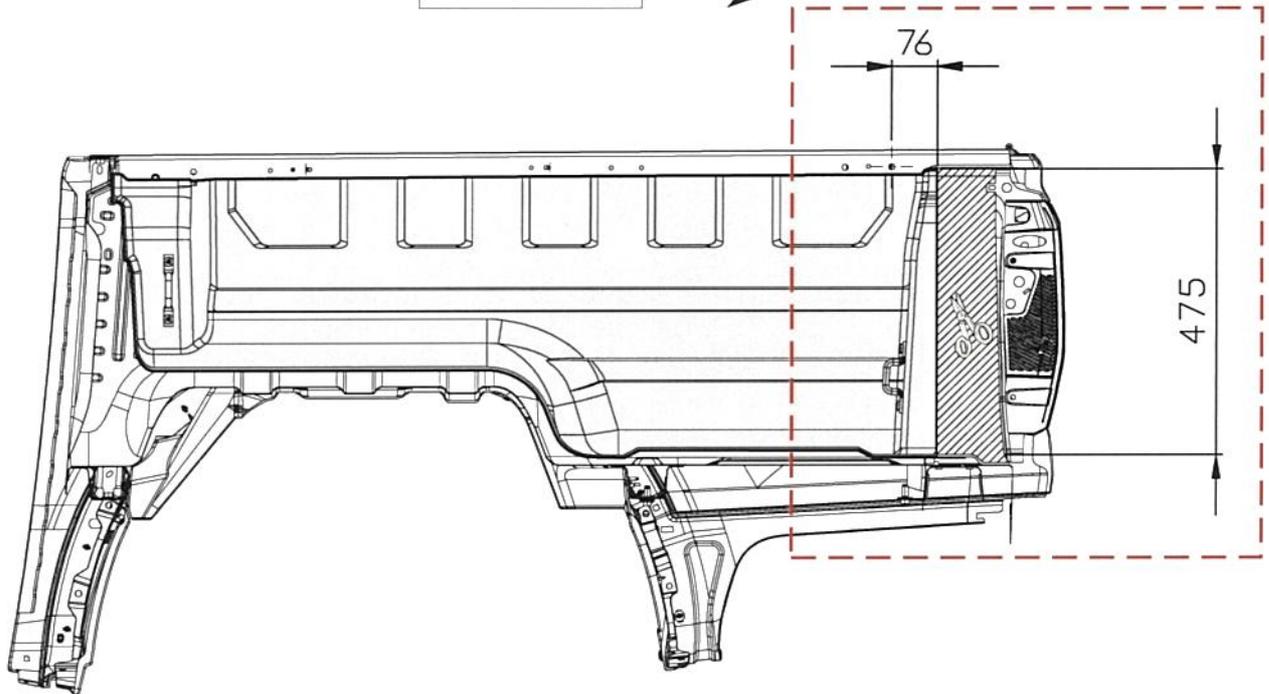

FITTING DUST SEAL

1

CUTTING TOOL

CUTTING DIMENSIONS, SEE PAGE 4.

2

CUTTING TOOL

CUTTING DIMENSIONS, SEE PAGE 4.

3

4

COVER DUST SEAL USE FOR ROLLER LID

COVER DUST SEAL USE FOR CANOPY

5

YES

AFTER CUT THE HEAD COVER, PLEASE DECORATE WITH SANDPAPER.

CUTTING TOOL

CUT THE HEAD COVER USE FOR ROLLER LID

COVER DUST SEAL WITHOUT HEAD USE FOR ROLLER LID

NO





6

USE FOR CANOPY




RUBBER SEAL PLATE FOR CANOPY

J x2

NOTE:
 1. THIS STEP FOR USING DUST SEAL WITH ROLLER LID.
 2. IF YOU USING DUST SEAL WITH CANOPY, YOU CAN SKIP TO NEXT STEP (6).

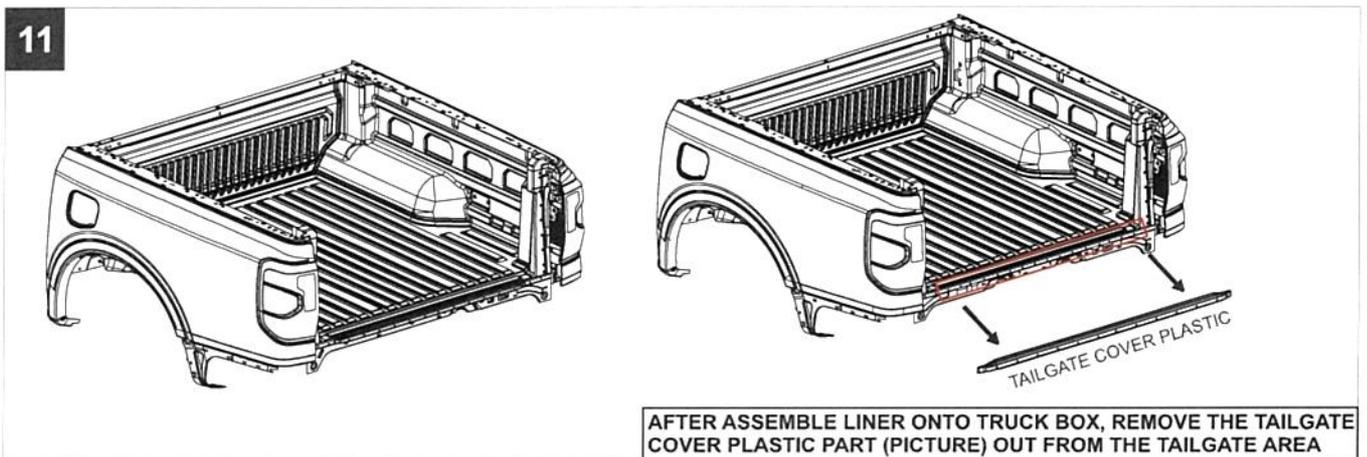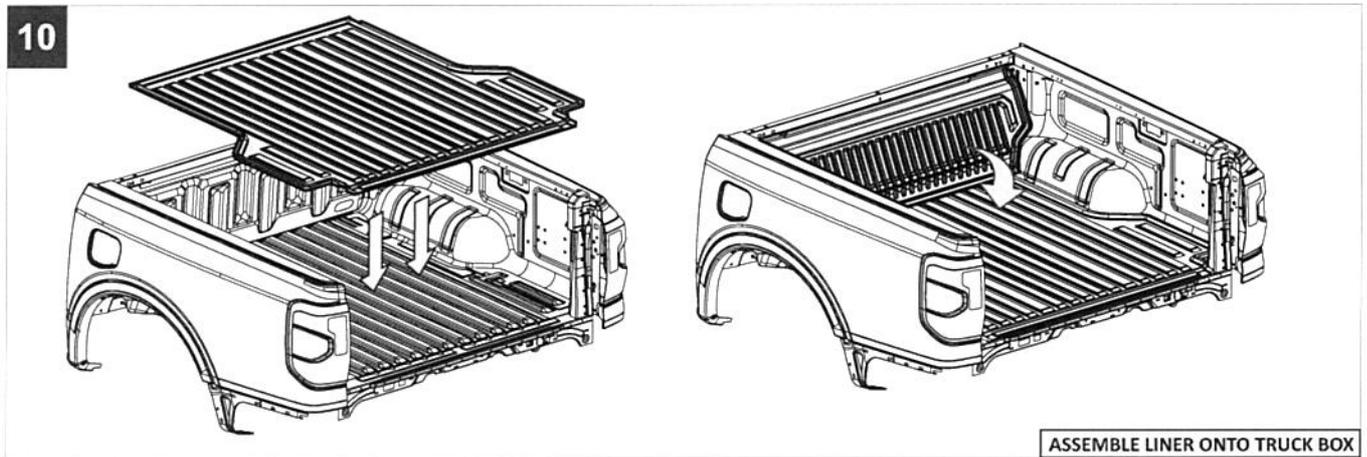
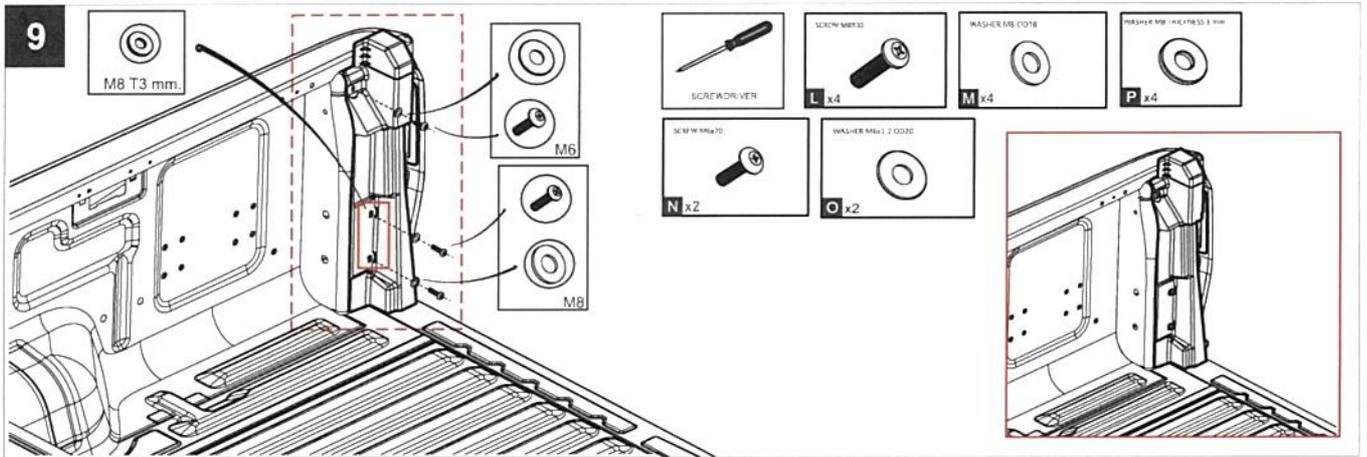
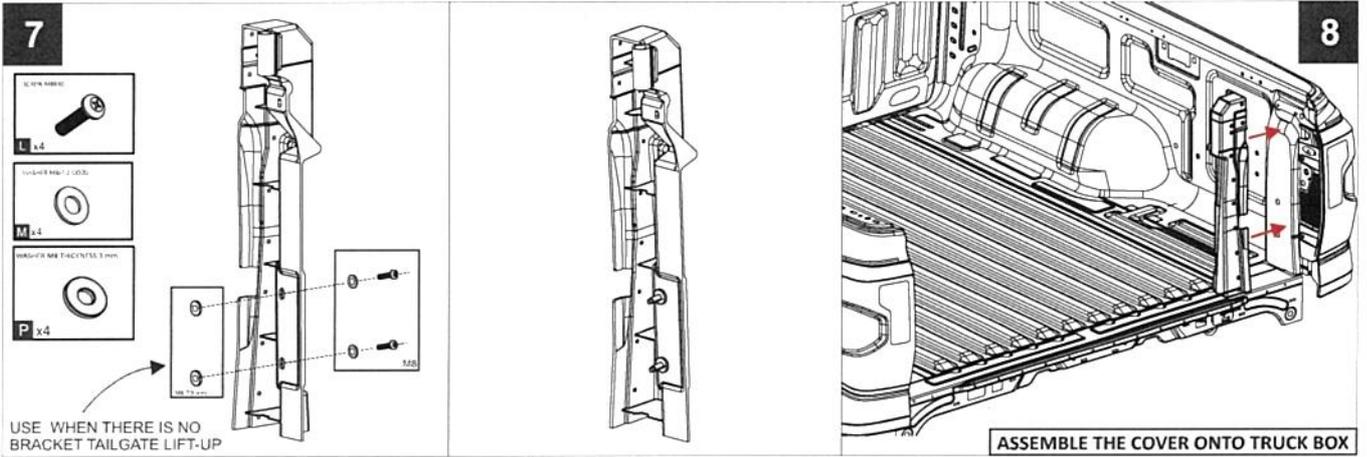


12

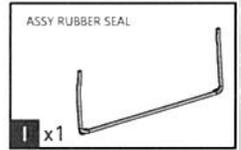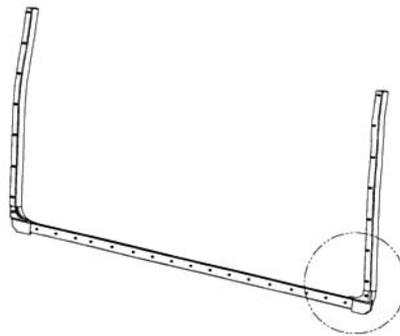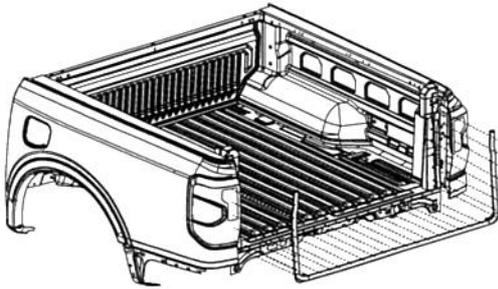





IN CASE THAT SOME TRUCK MODELS HAVE NO ORIGINAL CLIP HOLES AT THE TAILGATE AREA, PULL OUT THE PLASTIC PUSH CLIPS OF THE DUST SEAL RUBBER. THEN APPLYING DOUBLE SIDED ADHESIVE TAPE TO ATTACH THE DUST SEAL RUBBER TO THE TAILGATE AREA.

13

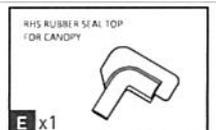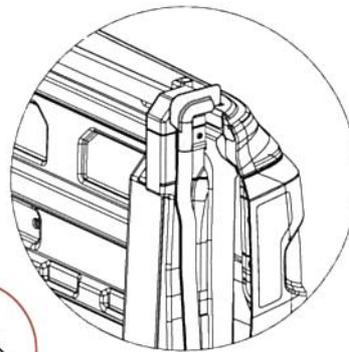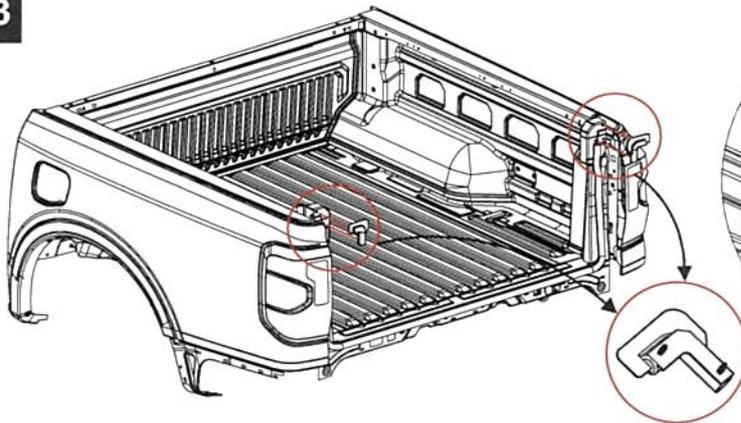




ASSEMBLE RUBBER SEAL FOR CANOPY

14

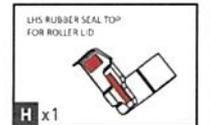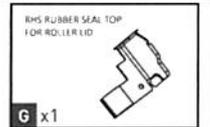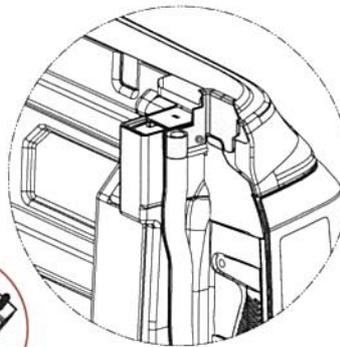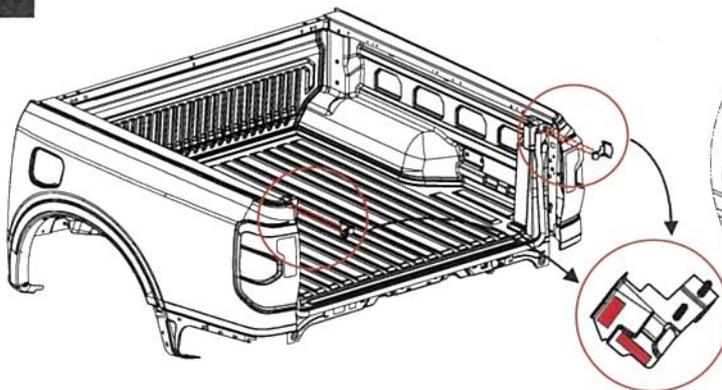

ASSEMBLE RUBBER SEAL FOR ROLLER LID

15

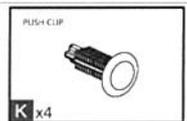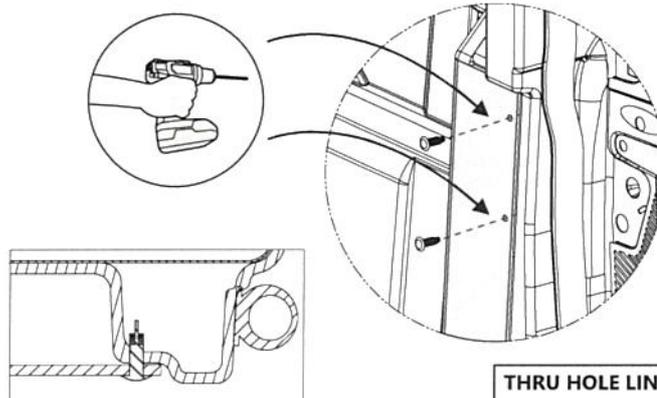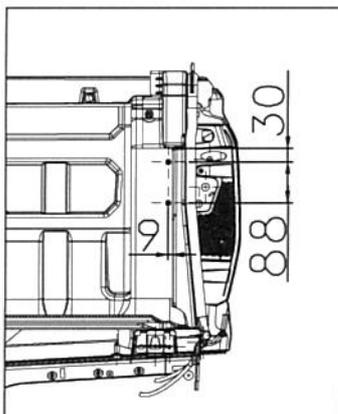

ELECTRIC DRILL



DRILL Ø5 mm.

THRU HOLE LINER OEM FORD P703 AND COVER FOR FIXED PUSH CLIP