

Toyota LC 250 24-

Mounting instructions
Art. 83570070, 83570071
Eurobar

English




WWW.METEC.EE

Scan the QR code
for translated
instructions or visit
metec.ee/instructions




Weight: 10,7 kg
Time of mounting w/o wiring: 60 min

Required tools:



A2 / A4

M4	-	2 Nm
M6	-	7 Nm
M8	-	17 Nm

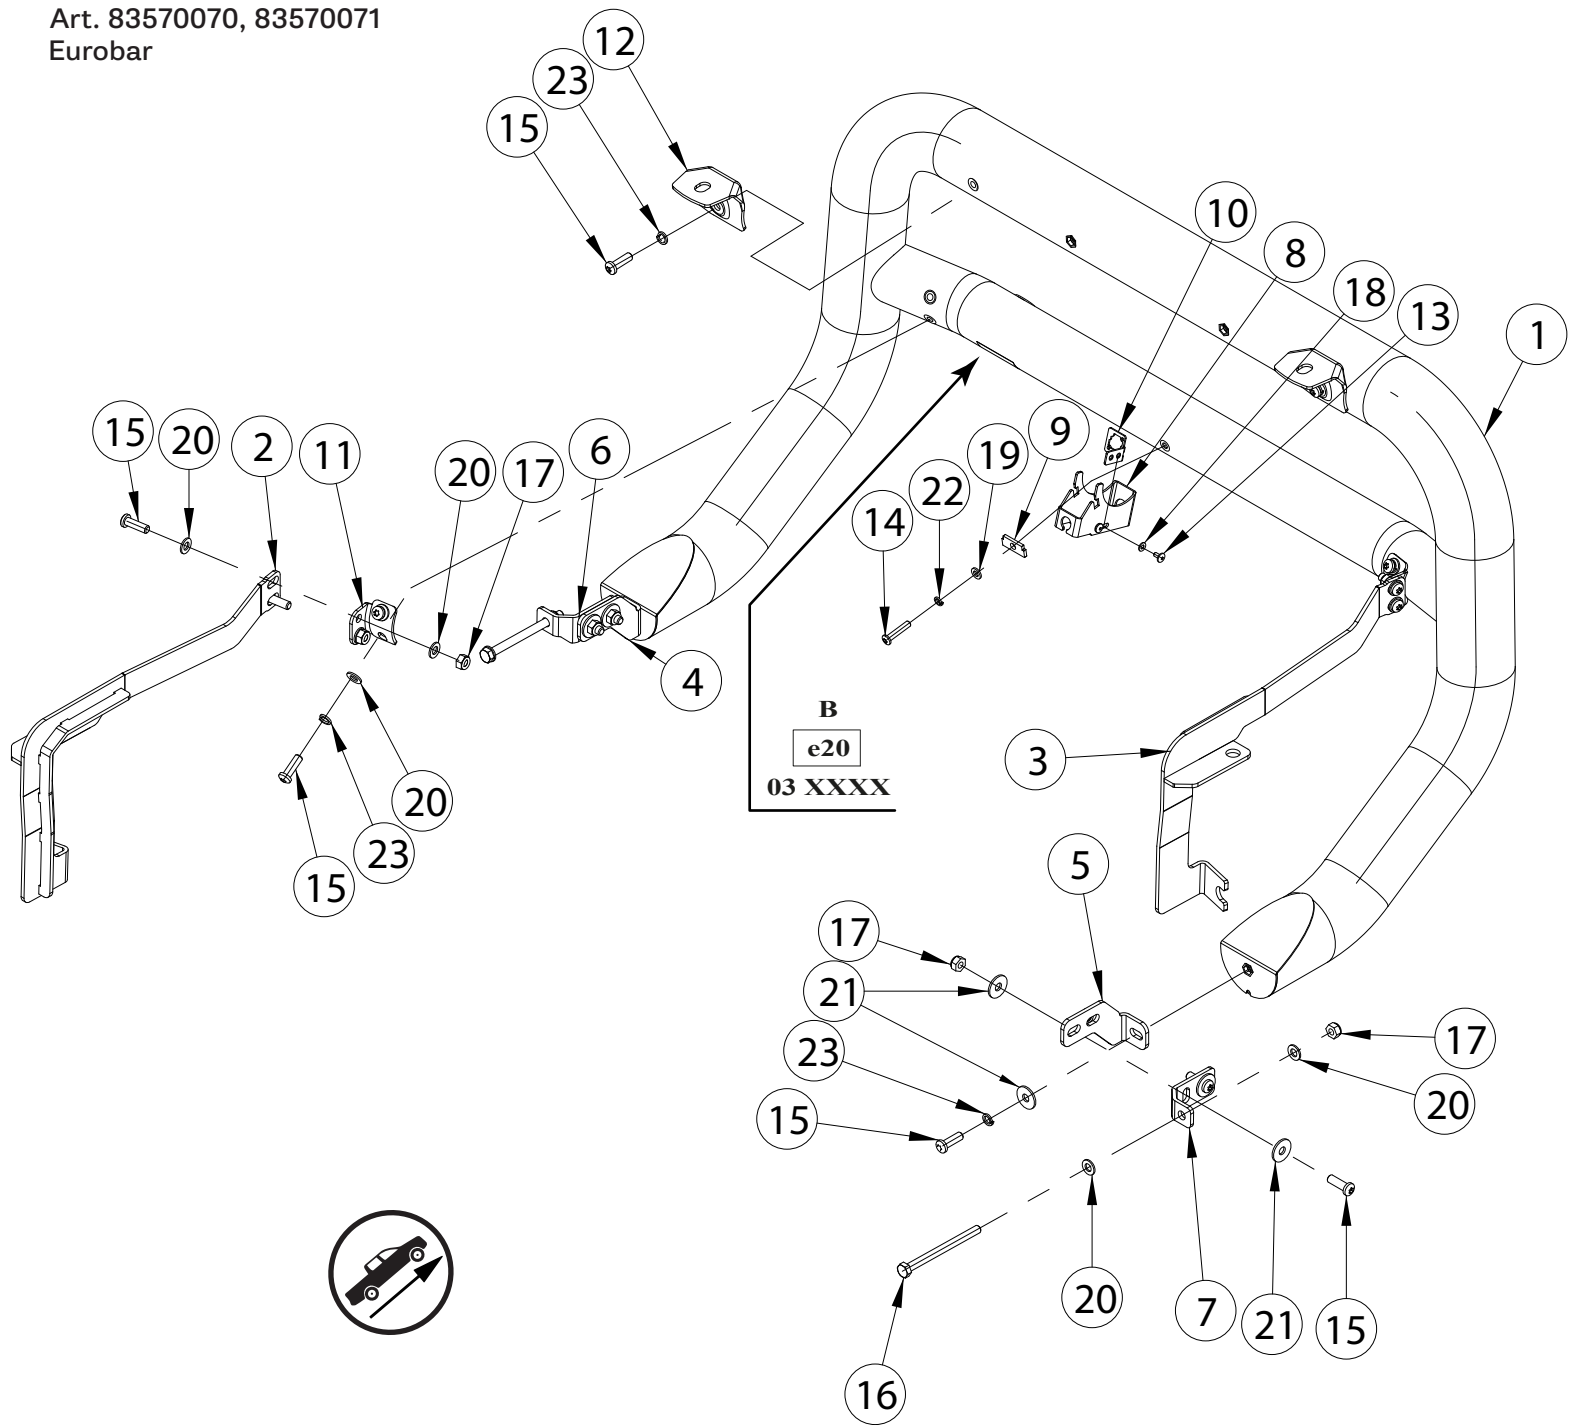

Pos	Description	QTY
1.	Tube	1
2.	Bracket	1
3.	Bracket	1
4.	Bracket	1
5.	Bracket	1
6.	Bracket	1
7.	Bracket	1
8.	Bracket	1
9.	Plate	1
10.	Clamp	1

Pos	Description	QTY
11.	Bolt bracket	2
12.	Lamp fixing bracket	2
13.	Bolt M4x8 DIN7380-A2	2
14.	Bolt M6x30 DIN7380-A2	1
15.	Bolt M8x25 DIN7380-A2	16
16.	Bolt M8x100 DIN931-A2	2
17.	Nut M8 DIN985-A2	10
18.	Flat Washer 4,3x9x0,8	2
19.	Flat Washer 6,4x12x1,6	1
20.	Flat Washer 8,4x16x1,6	16

Pos	Description	QTY
21.	Flat Washer 8,4x24x2	10
22.	Spring washer A6	1
23.	Spring washer A8	8







NB!













To prevent cold welding, use cold weld grease or engine oil



Installation of the lights must be carried out by a qualified electrician only

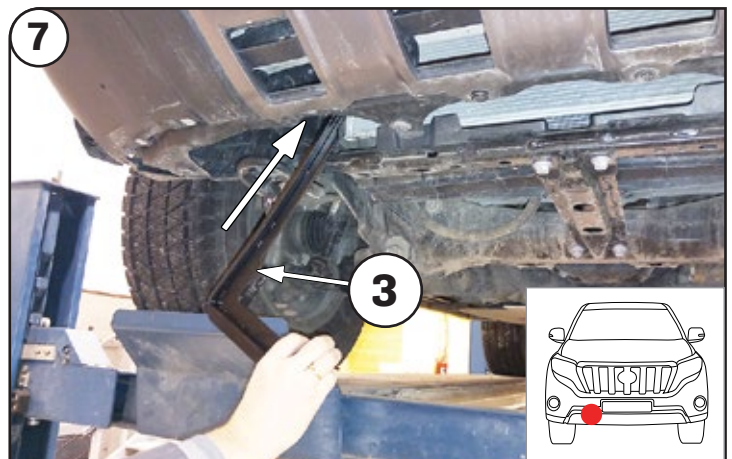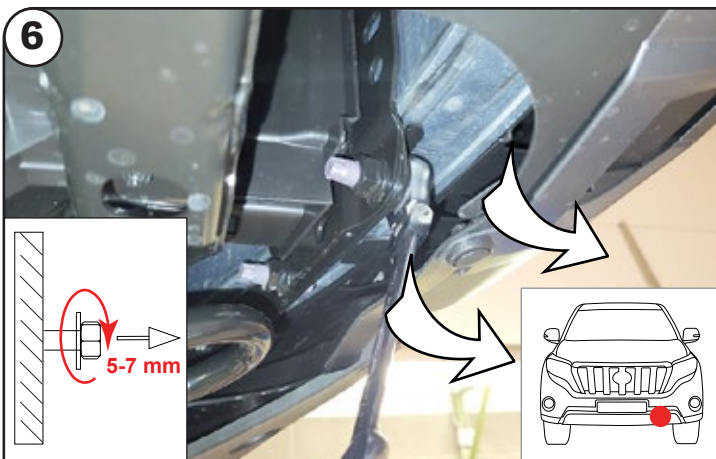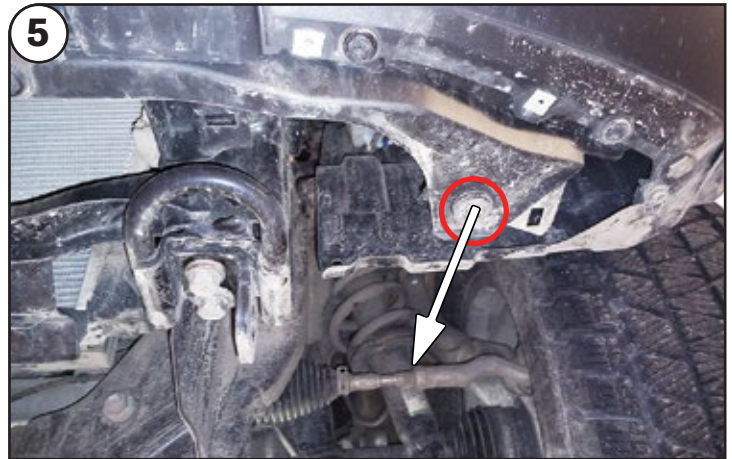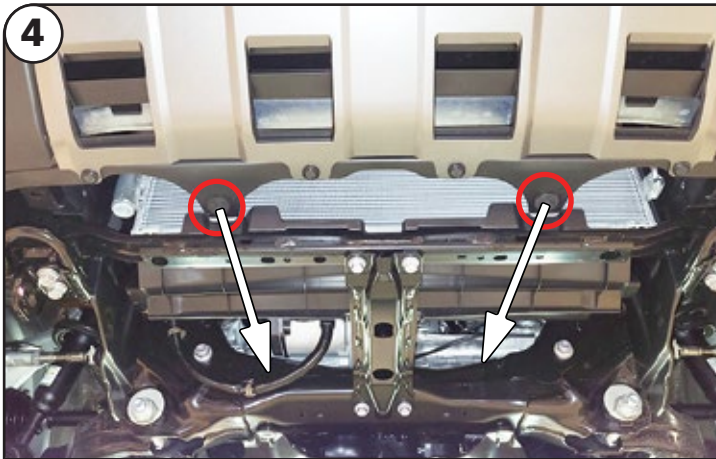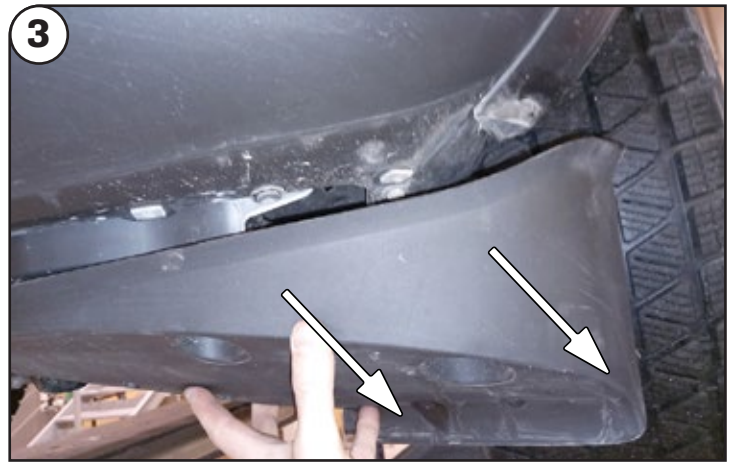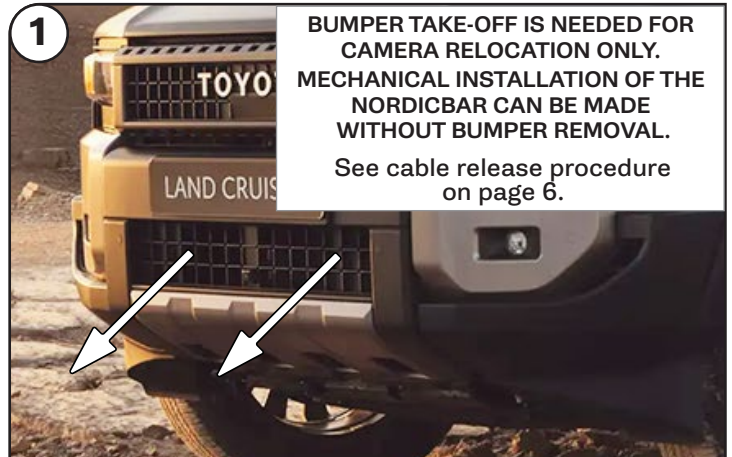

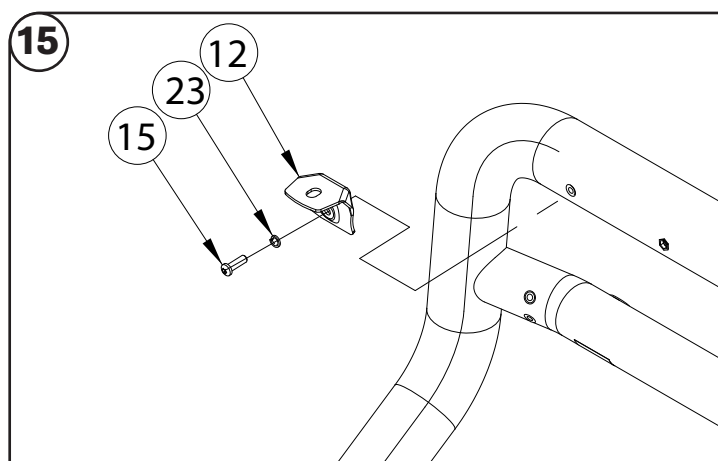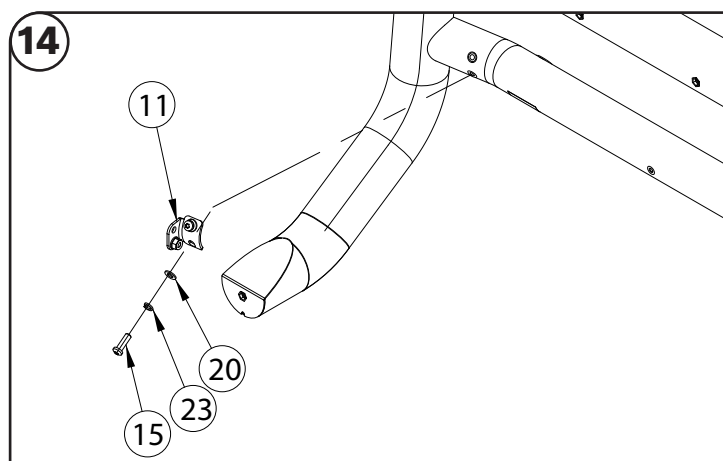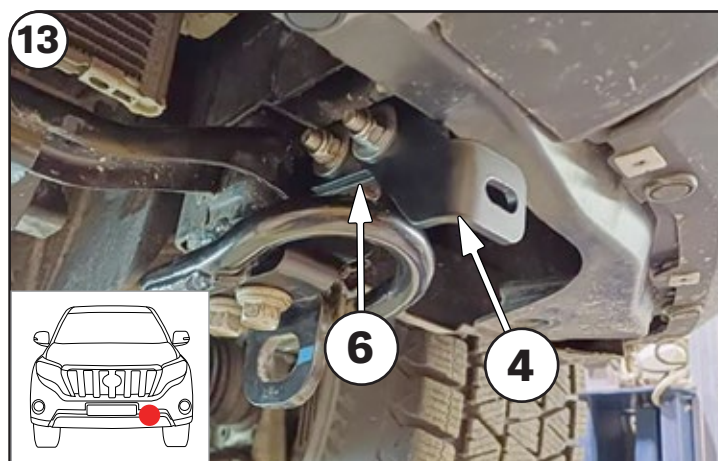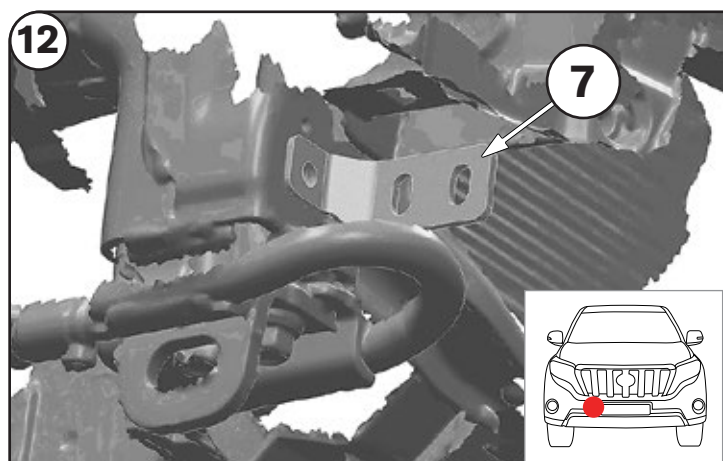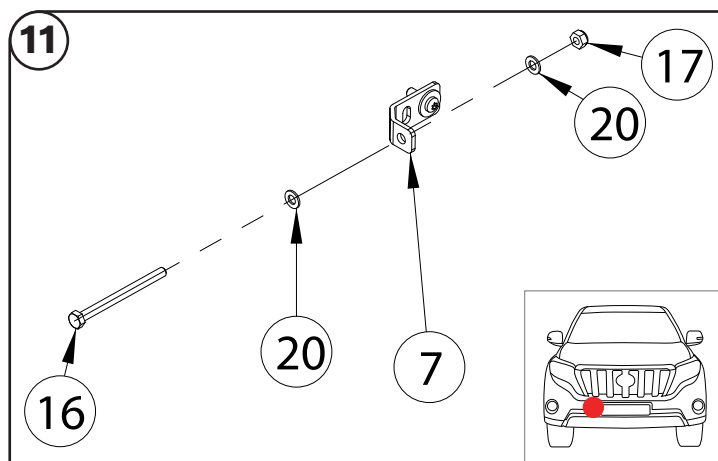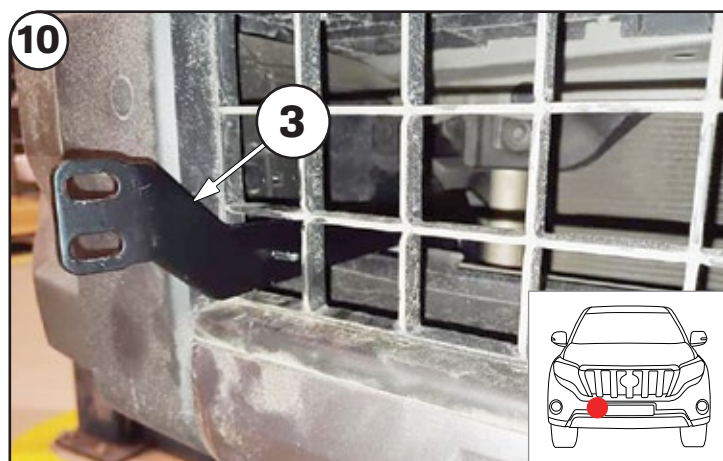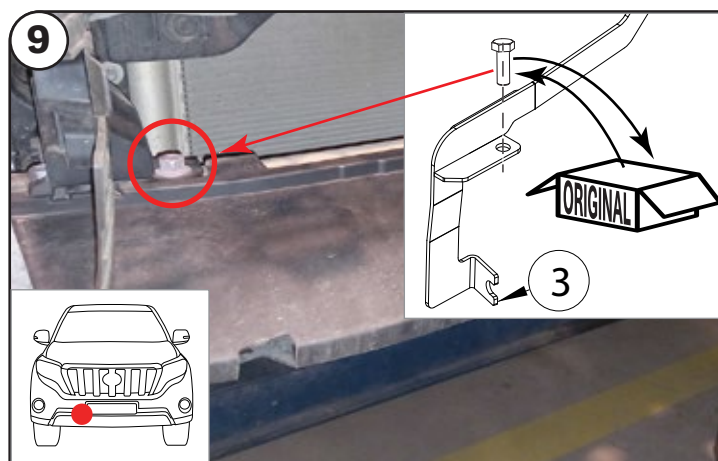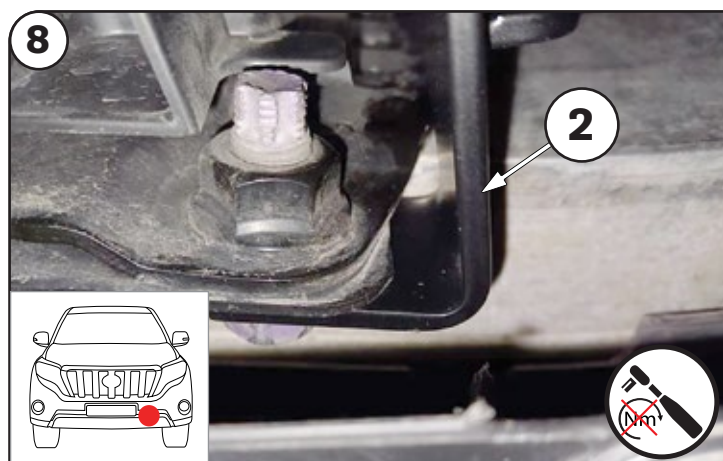

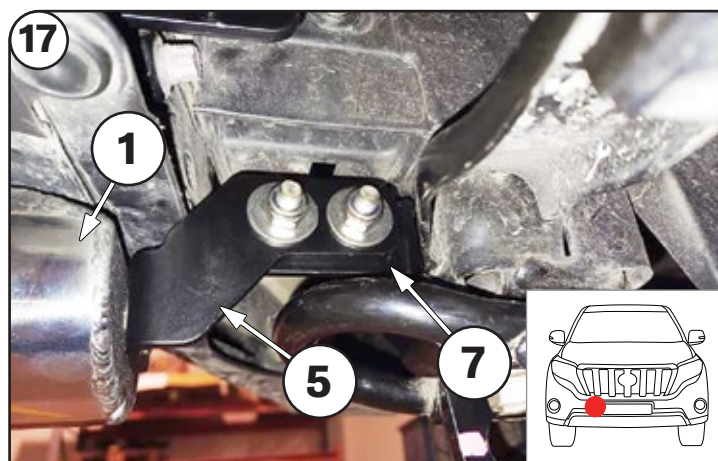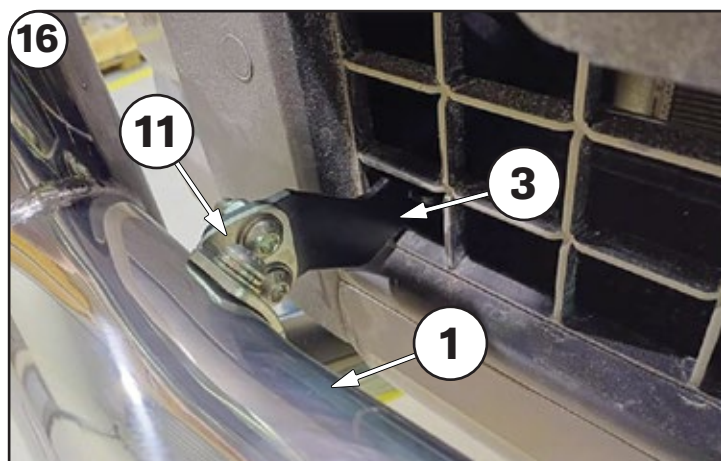

Check and retighten the fasteners:
Road vehicles: every 10 000km
Heavy machinery: every 500 work hours



Clean the product twice a month to remove dirt, salt, and debris that may cause surface discoloration or rust spots

