


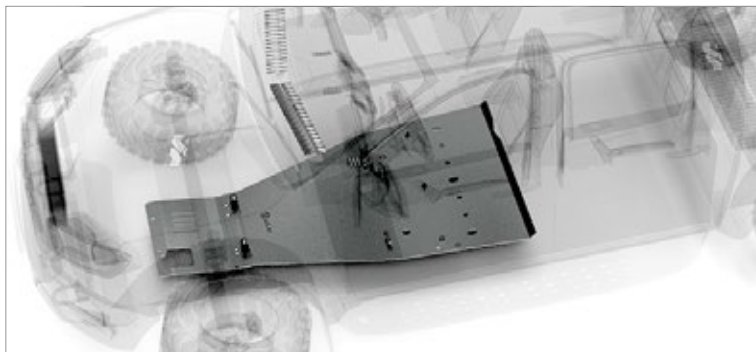



Ford Ranger 2022-

Art. 807403

Põhjakaitse | Skid plate | Защита картера | Motorschutz



- | | |
|---|---|
| 1. Põhjakaitse / skid plate / защита картера / Motorschutz | 1 |
| 2. Põhjakaitse pikendus / skid plate extension /
расширение нижней защиты картера / Erweiterung
für Motorschutz | 1 |
| 3. Toru / pipe / труба / Rohr 30x15 | 4 |
| 4. T-Polt / T-bolt / T-болт / T-Bolzen M10 | 2 |
| 5. Polt / bolt / болт / Bolzen M8x25 | 4 |
| 6. Polt / bolt / болт / Bolzen M8x30 | 4 |
| 7. Polt / bolt / болт / Bolzen M10x30 | 5 |
| 8. Polt / bolt / болт / Bolzen M10x50 | 2 |
| 9. Seib / flat washer / шайба / Scheibe 8,4x24x2 | 8 |
| 10. Seib / flat washer / шайба / Scheibe 10,5x20x2 | 4 |
| 11. Seib / flat washer / шайба / Scheibe 10,5x30x2,5 | 5 |
| 12. Mutter / nut / гайка / Mutter M10 | 2 |
| 13. Vedruseib / spring washer / пружинная шайба /
Federnscheibe A8 | 8 |
| 14. Vedruseib / spring washer / пружинная шайба /
Federnscheibe A10 | 5 |

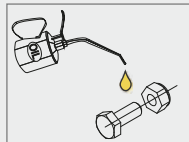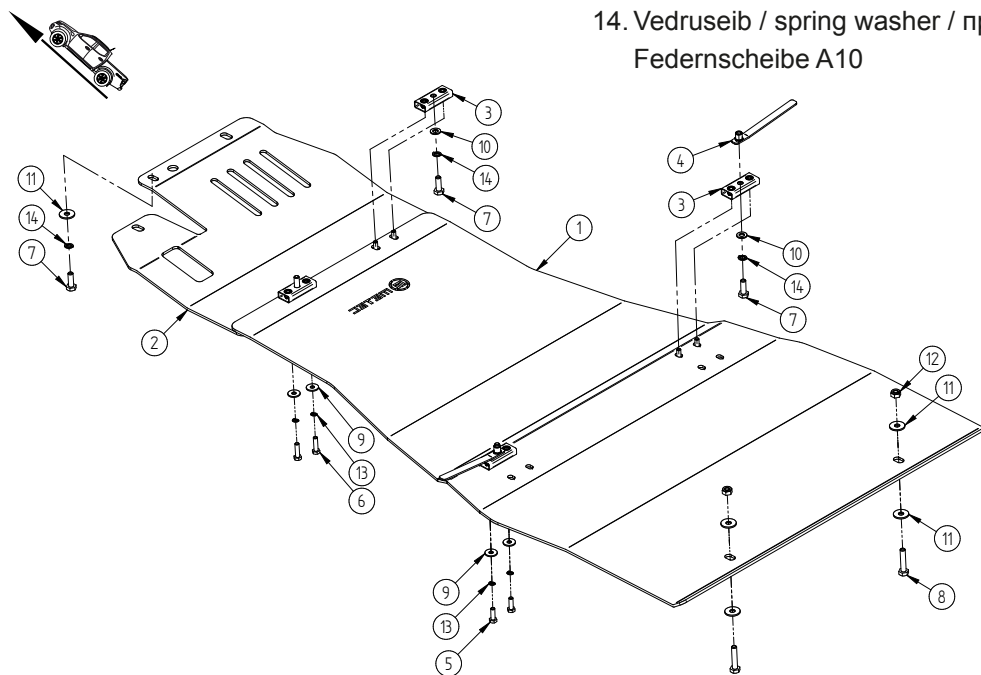

Külmkeevituse vältimiseks kasutada külmkeevitusvastast määret või mootoriõli.

To prevent cold welding, use cold weld grease or engine oil.

Verwenden Sie geeignetes Fett oder Motoröl, um die Kaltverschweißung zu verhindern.


Для предотвращения холодной сварки используйте смазку от холодной сварки или моторное масло.

Kaal / Weight / Масса / Gewicht: 18,02 kg

Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ /

Einbauzeit ohne elektrische arbeit: 20 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



M10 - 50 Nm



