



Montaažiskeem / Mounting Instructions / Монтажная схема


Toyota Land Cruiser 150

Art. 835520

Astmelaua ääretorud | Pipes around the stepboard | Трубы к порогам



- | | |
|--------------------------------------|-----|
| 1. Ääretoru / pipe / труба | 2 |
| 2. Kronstein / bracket / кронштейн | 3+3 |
| 3. Polt / bolt / болт M8x20 mm | 12 |
| 4. Seib / washer / шайба 8,4x24x2 mm | 24 |
| 5. Mutter / nut / гайка M8 DIN 985 | 12 |

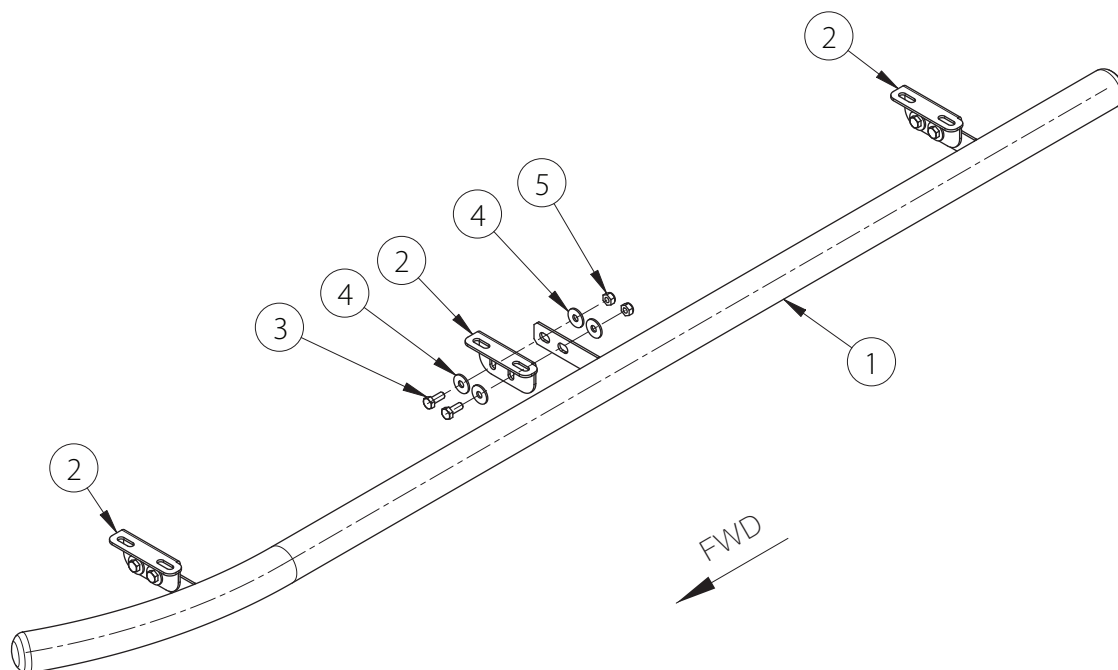

Vajalikud tööriistad / Required Tools / Необходимые инструменты



13



10

13



Pilt 1 / Pic. 1 / Рис. 1



Pilt 2 / Pic. 2 / Рис. 2

- EST • Paigalda kronsteinid nr. 2 originaal poltidega (pildid 1 ja 2).
ENG • Mount brackets no. 2 with original bolts (pic. 1 and 2).
RUS • Установить кронштейны н. 2 с оригинальными болтами (рис. 1 и 2).



Pilt 3 / Pic. 3 / Рис. 3





Pilt 4 / Pic. 4 / Рис. 4

- EST • Paigalda astmelaua ääretorud nr. 1 (pildid 3 ja 4).
ENG • Mount pipes no. 1 (pic. 3 and 4).
RUS • Установить трубы н. 1 (рис. 3 и 4).

Toote andmed / Data of the product / Данные о товаре

- Mõõdud / Measures / Размеры: 2x(48x150x1730) mm.
- Kaal / Weight / Масса: 5,9 kg.
- Paigaldusaeg / Time of mounting / Время установки: 30 min.
- Tähtsad markeeringud / Important labels / Важные этикетки:

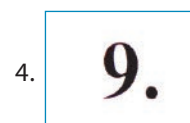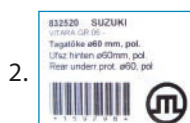

1. Komplekteerija number. / The number of the assembler / Номер комплектовщика
2. Tooteinfo pakendil / Product information on the package / Информация на упаковке
3. Tooteinfo tootel / Product information on the product / Информация на товаре
4. Kvaliteedi kontrolli tähis / Quality control number / Знак контроля качества